

PROAIM MB 30 SWING-AWAY Video Camera Matte Box (P-MB-30)

Assembly Manual




What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



Matte Box

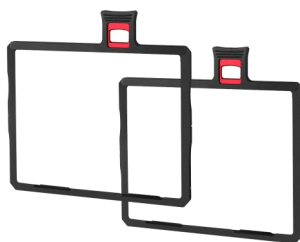

2 x 4 x 5.6" Filter Tray



15mm LWS Rod
Bracket



124mm Fabric Knicker



(OD-87)-(ID-77) mm
Threaded Adapter Ring

L-Type
Allen Key
(Size : 2mm)



T-Type Allen Key
(Size : 2.5mm)



124-87mm Plastic
Adapter Ring



124mm
Metal Ring



(OD-87)-(ID-82)
mm Threaded
Adapter Ring



(OD-87)-(ID-72)
mm Threaded
Adapter Ring



(OD-87)-(ID-67) mm
Threaded Adapter Ring


All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

MB 30 Matte Box Setup

Matte Box

- Release both the knobs on either side of the matte box to insert the filter trays.

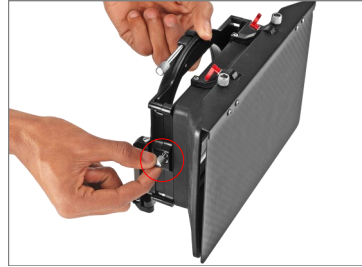

Filter Tray

- Insert the filter trays and then tighten the knobs.



- Use the Allen key to affix both the trays.



Adapter Rings

- Stretch the 124-87mm plastic adapter ring and insert the 124mm metal ring into the former, as shown in the image.



- The assembly will look like this.



- Now, loosen the knob of the conversion ring holder and insert the plastic ring into it, as shown in the image.



- Now, tighten the knob of the ring holder.



- Insert camera (Not Included) into the matte box's ring as shown in the image.



- Unlock the knob of your tripod (Not Included) and press the quick release button, as shown in the image.



- Now remove the plate (by sliding) from the tripod (Not Included) by pushing the quick release button.



- Attach the removed plate to the bottom of the camera (Not Included), and then tighten it with a screw.



- Then mount the assembly (**Not Included**) on top of the tripod (**Not Included**) by sliding.



- Now, lock the knob of the tripod (**Not Included**), as shown in the image.



- Open the carbon fiber flag of the matte box.



Matte Box With Fabric Knicker Setup

- Loosen and remove both the screws of the matte box using the T-Type Allen Key.



15mm LWS Rod Bracket

- Now, attach the 15mm LWS Rod Bracket to the matte box.



- Screw the LWS Rod Bracket to the matte box with the T-Type Allen key.



Adapter Ring

- Loosen the knob of the conversion ring holder and insert the 124mm Metal Ring into it, as shown in the image.



- Now, tighten the knob of the conversion ring holder, as shown in the image.



- The matte box would look like this after following all the instructions correctly.



Fabric Knicker

- Cover the attached ring with the 124mm fabric knicker and then tighten it.



- The matte box would look like this after following the above instructions.



Universal Base Plate

- Now, loosen the quick-release knob of the universal base plate to remove the dovetail camera plate **(Not Included)**.



- Attach the Dovetail camera plate to the camera **(Not Included)** and secure it properly using a screwdriver **(Not Included)**.



- Insert 2 rods **(Not Included)** into the universal base plate holes and then affix them with the camera **(Not Included)** base by sliding.





- Then, lock the center knob to secure it.



- Loosen the knob of the 15mm LWS Rod Bracket, and then insert the rods **(Not Included)** into the LWS Rod Bracket.



- Cover the camera lens **(Not Included)** with the other end of the Fabric Knicker.

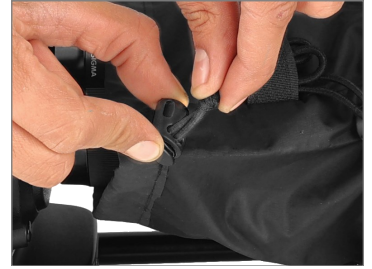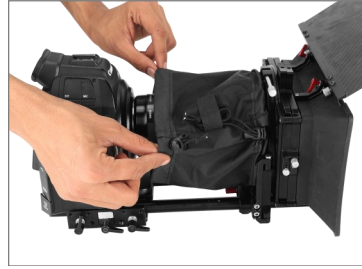

- Then, lock the knob of the LWS Rod Bracket.



- Remove the plate (by sliding) from the tripod **(Not Included)** by pushing the quick-release button.



- Attach the removed plate to the bottom of the universal base plate **(Not Included)** and screw it tightly.



- Mount the camera setup on the tripod **(Not Included)** by sliding and secure it by locking the knob of the tripod **(Not Included)**.



**YOUR PROAIM MB 30 SWING-AWAY VIDEO CAMERA MATTE BOX
ALL DRESSED UP AND READY TO GO!**



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.