


HIDE-A-MIC : How to use


The Hide-a-mic COS11 is a new and innovative tool especially designed to easily hide a Sanken COS11 lavalier microphone under any piece of clothing. The set contains 4 different holders with each its own use. Unlike conventional microphone holders, Hide-a-mic holders are very easy to apply. You just pick the right holder, put in place and you are ready to roll.

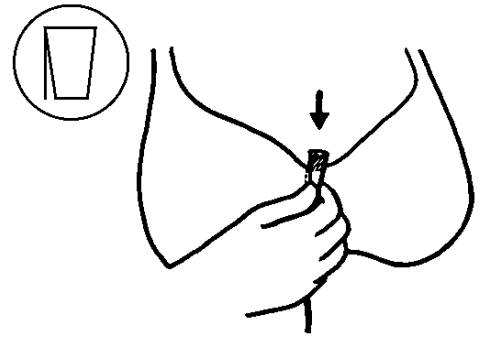

BRA-HOLDER

The bra is generally a good place to hide a microphone, but it's always a hassle to place it. With the Bra-holder you can avoid embarrassing moments. Just give the mic in the holder to the talent and she can apply it herself easily without damaging the bra.


BRA-HOLDER. BRA-HOLDER. SLIDE THE HOLDER OVER THE MICROPHONE AND PLACE THEM ON THE CENTER CORE OF THE BRA. DOESN'T DAMAGE FABRIC AND CAN BE SELF APPLIED BY THE TALENT.

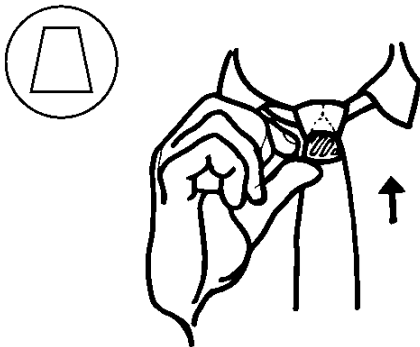

TIE-HOLDER

The Tie-holders are the basis of Hide-a-mic. A special tool to hide microphones in the knot of a tie can be very useful. You run the microphone from the back of the tie down through the knot. Then apply the holder and push it back in the knot. Easy and neatly.


TIE-HOLDER. FEED THE MICROPHONE FROM THE BACK OF THE TIE DOWN THROUGH THE KNOT. APPLY THE TIE-HOLDER TO THE MIC AND PUSH BACK UP INTO THE KNOT.

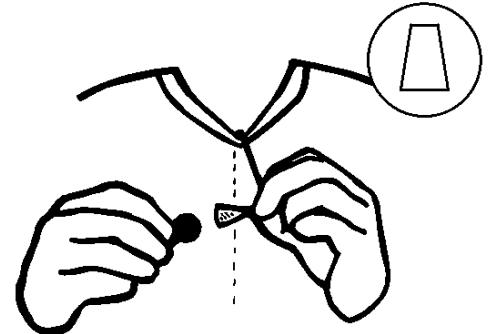

T-SHIRT-HOLDER

This is the most versatile of them all. The very small design can be placed behind a seam of a t-shirt. It is also usable as a small Tie-holder, in a scarf, with a Stickie in a coat, etc, etc. You can even put it in a small windjammer to protect it against wind. The T-shirt-holder is easy to apply and delivers good sound quality.

T-SHIRT-HOLDER. APPLY DOUBLE-SIDED TAPE TO THE BACK OF THE HOLDER. PLACE IT BEHIND THE SEAM OF THE T-SHIRT AND RUN WIRE OF THE MICROPHONE TO BACK OF THE TALENT.

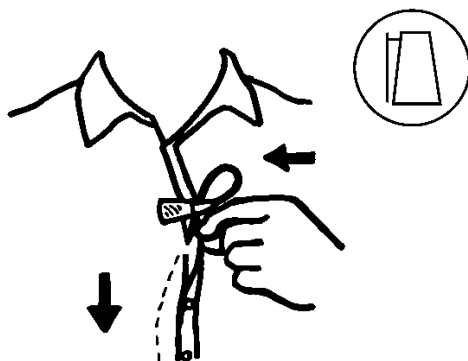

SHIRT-HOLDER

This holder is placed just above the button under a shirt. With the special design and strain relief the mic will stay in its place and the sound will be perfect.

SHIRT-HOLDER. PUT THE MIC IN THE SHIRT-HOLDER AND PLACE IT BEHIND THE FRONT PLACKET OF THE SHIRT. CLIP THE HOLDER CLOSE TO A BUTTON AND ADJUST THE STRAIN RELIEF AT THE BACK.