

Thank you for purchasing Tenergy 4-channels 9V Ni-MH/NI-CD charger! Please carefully read this manual before using.

## ■ Technical Data

Adapter input: 100~240VAC 50/60Hz

Output: 12VDC, 500mA Charger input: 12V DC, 500mA

Output: 100mA±10% per channel

Applicable battery type: 100mAh~500mAh 9V Ni-MH,NI-CD battery

## ■ Features

-Worldwide voltage for 100-240V AC and Carkit 12V

- -Micro-processor Control (-△ V detection) which automatically controls the charging process.
- -Four independent charging channels for individual charging and detection.

-Constant charging current mode, trickle current when fully charged.

-Reverse polarity protection. It automatically terminates charging and the LED flashes red when the polarity is reversely connected.

-Five hours' safety timer ensures safety.

## ■ Operation Instructions

- -Before charging, insert the batteries into the channels, then connect the adapter's plug to the power supply. When charging is finished, extract the plug and batteries.
- -LED indications: Red: charging

Green: fully charged and on trickle charging

Red flash: short-circuit, reverse polarity

## **■** Cautions:

-Don't disassemble the charger.

- -Don't charge other types of battery. It may cause explosion and breakage.
- -The charger is only for in-house using and should be kept away from heat surrounding.
- -Keep the charger away from humidity circumstances and no liquid is allowed to get in, otherwise it may cause damage and lead to accident.

It should be placed out of children's reach.

- -It may not be able to fully charge those batteries which have not been used for a long time. Several recycles of charge-discharge will improve the battery's performance.
- -Don't play with the charger as toy. No metal material is allowed to get into the charger, otherwise it may cause fire and injury.