


BEAMSPOT-4BAR

WW / NW

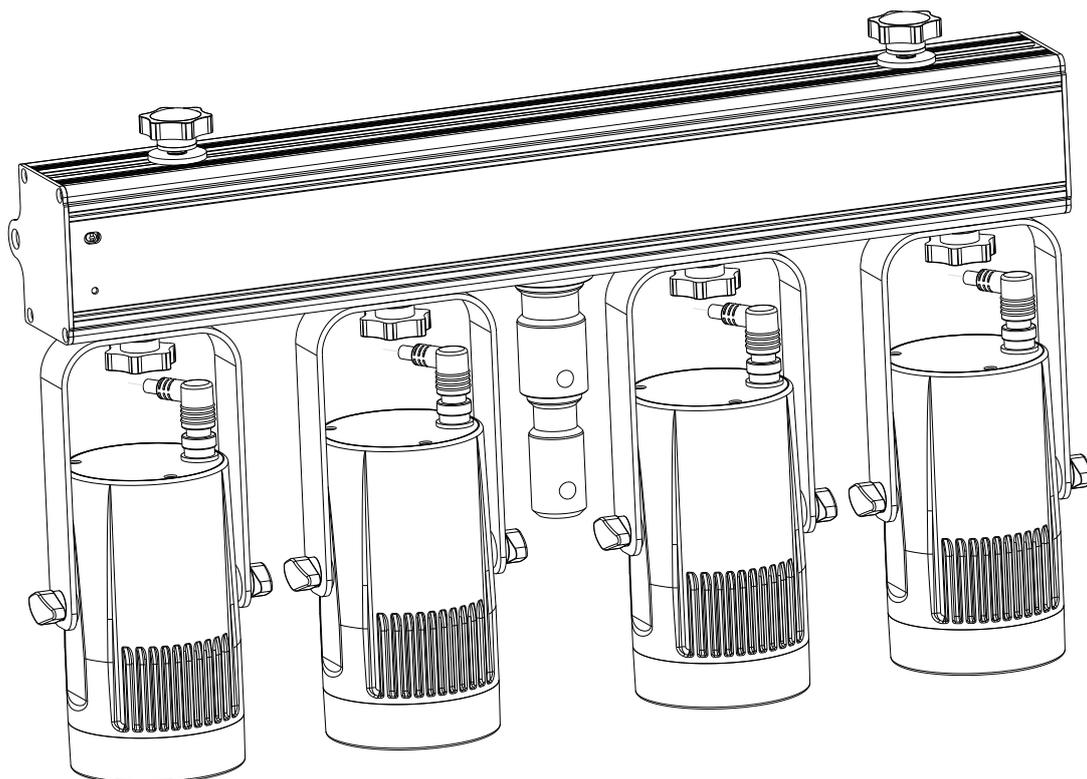

ENGLISH

Operation Manual

Other languages can be downloaded from:
WWW.BRITEQ-LIGHTING.COM



Version: 1.0





EN - DISPOSAL OF THE DEVICE

Dispose of the unit and used batteries in an environment friendly manner according to your country regulations.

FR - DÉCLASSER L'APPAREIL

Débarrassez-vous de l'appareil et des piles usagées de manière écologique Conformément aux dispositions légales de votre pays.

NL - VERWIJDEREN VAN HET APPARAAT

Verwijder het toestel en de gebruikte batterijen op een milieuvriendelijke manier conform de in uw land geldende voorschriften.

DU - ENTSORGUNG DES GERÄTS

Entsorgen Sie das Gerät und die Batterien auf umweltfreundliche Art und Weise gemäß den Vorschriften Ihres Landes.

ES - DESHACERSE DEL APARATO

Reciclar el aparato y pilas usadas de forma ecologica conforme a las disposiciones legales de su país.

PT - COMO DESFAZER-SE DA UNIDADE

Tente reciclar a unidade e as pilhas usadas respeitando o ambiente e em conformidade com as normas vigentes no seu país.

OPERATION MANUAL

Thank you for buying this Briteq® product. To take full advantage of all possibilities and for your own safety, please read these operating instructions very carefully before you start using this unit.

FEATURES

- This compact 4bar has four 15W projectors with a very narrow 4° beam.
- Thanks to the included 10° & 45° filters this bar can also be used for exhibition booths, clubs, shops, ... (perfect to light up small objects and small tables)
- Natural white 4500K (or warm white 3200K) color temperature with high CRI-factor (>90).
- 4 different DMX-modes: control via 1, 2, 4 or 5 channels.
- RDM-functionality for easy remote setup: DMX addressing, channel mode, ...
- The OLED-display assures easy navigation in the different setup menus.
- TV-Studio ready: no cooling fans and flicker free 1200Hz LED refresh rate.
- Selectable dimming speed: from slow halogen lamp behavior to fast led behavior
- Four dimmer curves: linear, square, inverse square, S-curve
- In case of DMX failure you can choose between blackout and freeze mode.
- Lock function to avoid unwanted altering of the settings.
- Default factory settings + user settings can be saved/loaded.
- 3pin & 5pin DMX in/outputs and Neutrik® PowerCON® in/outputs for easy daisy chaining.

BEFORE USE

- Before you start using this unit, please check if there's no transportation damage. Should there be any, do not use the device and consult your dealer first.
- **Important:** This device left our factory in perfect condition and well packaged. It is absolutely necessary for the user to strictly follow the safety instructions and warnings in this user manual. Any damage caused by mishandling is not subject to warranty. The dealer will not accept responsibility for any resulting defects or problems caused by disregarding this user manual.
- Keep this booklet in a safe place for future consultation. If you sell the fixture, be sure to add this user manual.

Check the contents:

Check that the carton contains the following items:

- English operating instructions, other languages can be downloaded from our website.
- BEAMSPOT4-BAR NW or WW
- 4x 10° frost filters
- 4x 45° frost filters
- 4x metal ring to fix the frost filters
- PowerCON mains cable
- Wireless remote controller

SAFETY INSTRUCTIONS:



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: To reduce the risk of electric shock, do not remove the top cover. No user-serviceable parts inside. Refer servicing to qualified service personnel only.



The lightning flash with arrowhead symbol within the equilateral triangle is intended to alert the user or the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying this appliance.



This symbol means: indoor use only



This symbol means: Read instructions




This symbol determines: the minimum distance from lighted objects. The minimum distance between light-output and the illuminated surface must be more than 1 meters

RISK GROUP 2
CAUTION:
Do not stare at operating lamp

CAUTION: Do not stare at operating lamp.
May be harmful to the eyes.

- To protect the environment, please try to recycle the packing material as much as possible.
- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.
- To avoid condensation to be formed inside, allow the unit to adapt to the surrounding temperatures when bringing it into a warm room after transport. Condense sometimes prevents the unit from working at full performance or may even cause damages.
- This unit is for indoor use only.
- Don't place metal objects or spill liquid inside the unit. Electric shock or malfunction may result. If a foreign object enters the unit, immediately disconnect the mains power.
- Locate the fixture in a well ventilated spot, away from any flammable materials and/or liquids. The fixture must be fixed at least 50cm from surrounding walls.
- Don't cover any ventilation openings as this may result in overheating.
- Prevent use in dusty environments and clean the unit regularly.
- Keep the unit away from children.
- Inexperienced persons should not operate this device.
- Maximum safe ambient temperature is 40°C. Don't use this unit at higher ambient temperatures.
- Make sure the area below the installation place is free from unwanted persons during rigging, de-rigging and servicing.
- Allow the device about 10 minutes to cool down before to start servicing.
- Always unplug the unit when it is not used for a longer time or before to start servicing.
- The electrical installation should be carried out by qualified personal only, according to the regulations for electrical and mechanical safety in your country.
- Check that the available voltage is not higher than the one stated on the unit.
- The power cord should always be in perfect condition. Switch the unit immediately off when the power cord is squashed or damaged. It must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never let the power-cord come into contact with other cables!
- This fixture must be earthed in order to comply with safety regulations.
- Don't connect the unit to any dimmer pack.
- Always use an appropriate and certified safety cable when installing the unit.
- In order to prevent electric shock, do not open the cover. Apart from the mains fuse there are no user serviceable parts inside.
- **Never** repair a fuse or bypass the fuse holder. **Always** replace a damaged fuse with a fuse of the same type and electrical specifications!
- In the event of serious operating problems, stop using the fixture and contact your dealer immediately.
- The housing and the lenses must be replaced if they are visibly damaged.
- Please use the original packing when the device is to be transported.
- Due to safety reasons it is prohibited to make unauthorized modifications to the unit.

Important: Never look directly into the light source! Don't use the effect in the presence of persons suffering from epilepsy.

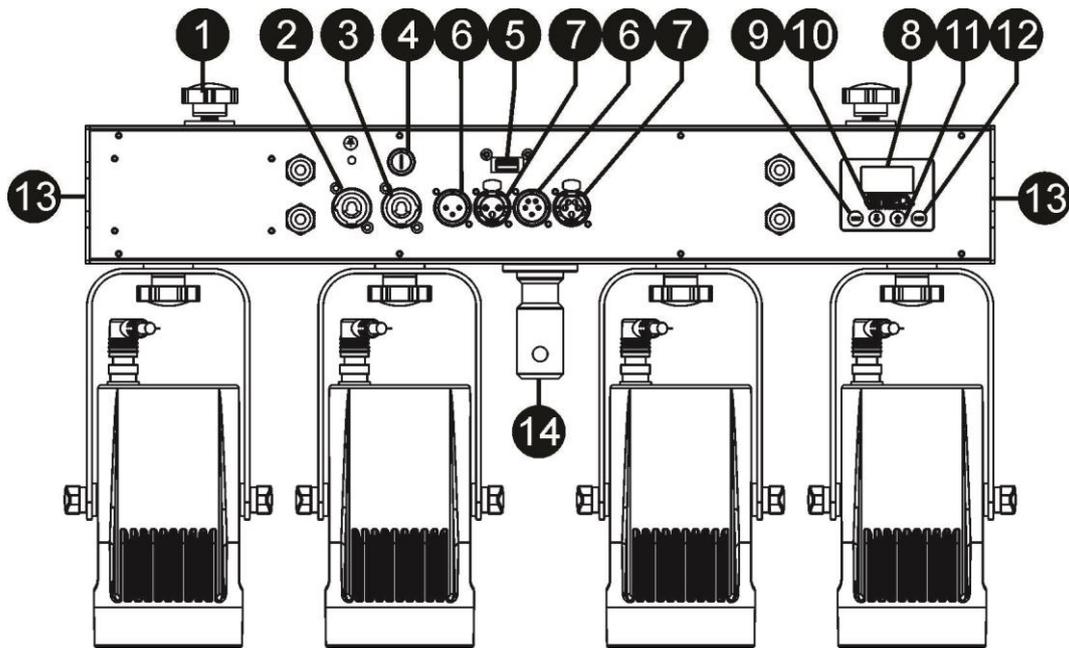DESCRIPTION:

1. **SCREWS:** can be used to fix hanging clamps or other projectors
2. **MAINS INPUT:** equipped with original Neutrik PowerCON®. Connect the supplied mains cable or any PowerCon® extension cable here.
3. **MAINS OUTPUT:** used to daisy chain the power to several other projectors. Always pay attention to the maximum load while adding projectors! Special Multi cables (PowerCON® + DMX XLR-cables are optionally available: see our website!)
4. **FUSE:** T2A/250V. Never use another type of fuse in this item. If problems occur, please bring the unit to your dealer for repair.
5. **M-DMX INPUT:** Please note that this USB-connector is NOT used for updates or to connect the unit to a PC! Instead this USB-connector makes it very easy to add wireless DMX to the unit! Just add the (optional) WTR-DMX DONGLE from BRITEQ® and you will get wireless DMX! Moreover you will be able to connect other DMX-controlled equipment to the DMX-output so you can share the wireless DMX function with all connected units! No extra settings to be made in the setup menu, just follow the procedure in the user manual supplied with the WTR-DMX DONGLE from BRITEQ®. The separate WTR-DMX DONGLE is available from WWW.BRITEQ-LIGHTING.COM (order code: 4645)
6. **DMX IN:** used to control the unit via a DMX controller. The DMX-input is also used to update the firmware of the projector, see the upgrade instructions on our website.
7. **DMX OUT:** used to daisy chain the projector with other units that will be controlled by a DMX-controller.
8. **DISPLAY:** shows the various menus and the selected functions:
9. **MENU-button:** used to browse the different menu options or to exit a menu option.
10. **▼-button:** used to go to the next menu option or to decrease a parameter value.
11. **▲-button:** used to go to the previous menu option or to increase a parameter value.
12. **ENTER-button:** used to select a menu option or confirm a setting.
13. **SAFETY EYE:** used to attach a safety cable when the unit is rigged, see paragraph "overhead rigging".
14. **SPIGOT:** 28mm spigot for stand mounting

OVERHEAD RIGGING

Important: The installation must be carried out by qualified service personal only. Improper installation can result in serious injuries and/or damage to property. Overhead rigging requires extensive experience! Working load limits should be respected, certified installation materials should be used, the installed device should be inspected regularly for safety.

- Make sure the area below the installation place is free from unwanted persons during rigging, de-rigging and servicing.
- Locate the fixture in a well ventilated spot, far away from any flammable materials and/or liquids. The fixture must be fixed **at least 50cm** from surrounding walls.
- The device should be installed out of reach of people and outside areas where persons may walk by or be seated.

- Before rigging make sure that the installation area can hold a minimum point load of 10times the device's weight.
- Always use a certified safety cable that can hold 12times the weight of the device when installing the unit. This secondary safety attachment should be installed in a way that no part of the installation can drop more than 20cm if the main attachment fails.
- The device should be well fixed; a free-swinging mounting is dangerous and may not be considered!
- Don't cover any ventilation openings as this may result in overheating.
- The operator has to make sure that the safety-relating and machine-technical installations are approved by an expert before using them for the first time. The installations should be inspected every year by a skilled person to be sure that safety is still optimal.

SETUP MENU / HOW TO SETUP

With the setup menu you can fully configure the projector. All settings are preserved when the unit is disconnected from the mains.

- To select any of the functions, press the MODE button until the required function is shown on the display or use the ▲/▼ buttons to browse the menu.
- Select the function with the ENTER button.
- Use ▲/▼ buttons to change the values.
- Once the required value is selected, press the ENTER button to confirm.

DMX ADDR

Used to set the desired DMX-address.

- Press the [MENU] button or ▲/▼ buttons until the desired function is shown on the display.
- Press the [ENTER] button: the DMX value can now be changed
- Use ▲/▼ buttons to select the desired DMX512 address. The last occupied DMX-address is also shown: this makes it easier to set the address of the next unit in the chain.
- Once the correct address shows on the display, press the [ENTER] button to save it.

Note: on RDM-compatible controllers this option can also be remotely set.

CHANNEL MODE

Used to set the desired channel mode.

- Press the [MENU] button or ▲/▼ buttons until the desired function is shown on the display.
- Press the [ENTER] button: the values can be changed
- Use ▲/▼ buttons to select the desired mode:
 - [1CH]: master dimmer
 - [2CH]: master dimmer + strobe
- Once the correct option shows on the display, press the [ENTER] button to save it.

Remark: on RDM-compatible controllers this option can also be remotely set.

SLAVE MODE

Used to set the projector as slave in a master/slave setup.

- Press the [MENU] button or ▲/▼ buttons until the desired function is shown on the display.
- Press the [ENTER] button

AUTOMATIC MODE

Used to select an automatic effect while the unit is used as master. (no dmx control)

- Press the [MENU] button or ▲/▼ buttons until one of the automatic modes is shown on the display.
- Press the [ENTER] button: the automatic mode can now be changed
- Use ▲/▼ buttons to select the desired automatic mode: [METEOR], [FLOW 1] or [FADE]
- Press the [ENTER] button to confirm your selection: the speed of the effect [S] can now be changed
- Use ▲/▼ buttons to select the desired speed
- Press the [ENTER] button to confirm your selection: the flash rate [F] can now be changed
- Use ▲/▼ buttons to select the desired flash rate
- Press the [ENTER] button to confirm your selection

INVERT MODE

Used to set to invert the flow of the automatic programs or to invert the order of the projectors when the bar is controlled by DMX.

- Press the [MENU] button or ▲/▼ buttons until [INVERT] is shown on the display.
- Press the [ENTER] button
- Use ▲/▼ buttons to activate [ON] or deactivate [OFF] the inversion.
- Press the [ENTER] button to confirm your setting

MASTER DIM

Used to set the master dimmer while the unit is used as master.


- Press the [MENU] button or ▲/▼ buttons until the desired function is shown on the display.
- Press the [ENTER] button: the values can be changed
- Use ▲/▼ buttons to select the desired level for the master dimmer. (please note that the last selected static color will be used to set the value)
- Once you have the desired level, press the [ENTER] button to save it.

Note: the setting of this option has NO effect while the projector is used as SLAVE or in DMX-mode.

DIMMER CURVE

Used to set the dimmer curve of the master dimmer.

- Press the [MENU] button or ▲/▼ buttons until the desired function is shown on the display.
- Press the [ENTER] button: the values can be changed
- Use ▲/▼ buttons to selected the desired curve:

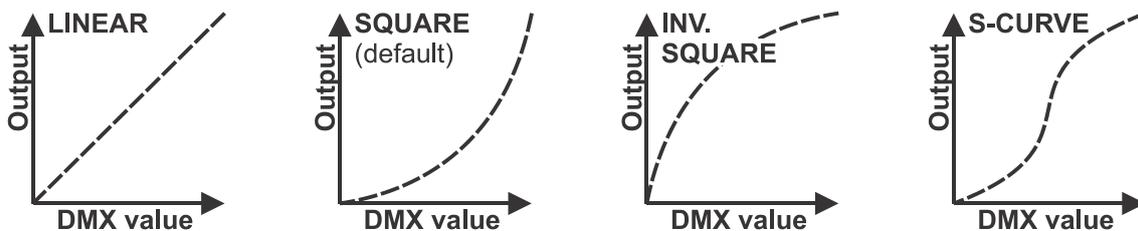

- Once you have the desired curve, press the [ENTER] button to save it.

DIM SPEED

Used to set the speed (smoothness) of the dimmer.

- Press the ▲/▼ buttons until the desired function is showing on the display.
- Press the [ENTER] button: the values can be changed
- Use ▲/▼ buttons to select the desired speed:
 - **000 (0ms):** The projector follows the instructions instantly, no delay (also called LED behavior).
 - ...
 - **255 (2s):** The projector imitates the behavior of a halogen lamp (slower reaction time).
- Once the desired value shows on the display, press the [ENTER] button to confirm your setting.

Remark: The default value (100 or 400ms) is the most realistic value to imitate "halogen lamp" behavior. Please note that with values close to 0ms the dimming will not be perfectly smooth, you will notice some small steps while dimming. This behavior is normal, just increase the value to +/-100ms to avoid this.

IR REMOTE

Used to activate or deactivate the receiver for the infra-red remote controller.

- Press the [MENU] button or ▲/▼ buttons until [IR SWTCH] is shown on the display.
- Press the [ENTER] button
- Use ▲/▼ buttons to select the desired mode:
 - [OFF] The IR remote controller can not be used
 - [ON] The IR remote controller can be used
- Press the [ENTER] button to confirm

LOCK MENU

Used to lock the setup menu against unwanted altering of the settings.

- Press the [MENU] button or ▲/▼ buttons until the desired function is shown on the display.
- Press the [ENTER] button: the values can be changed
- Use ▲/▼ buttons to select the desired mode:

- **[OFF]** The setup menu can be used at any time.
- **[ON]** After a short time the setup menu locks automatically, the display shows **[LOCKED ****]**.
Unlock the display by pressing the buttons in this order: **UP, DOWN, UP, DOWN, ENTER**.
- Once the correct option shows on the display, press the **[ENTER]** button to save it.

NO DMX BEHAVIOR

Used to set how the projector reacts when the DMX-signal suddenly disappears.

- Press the **[MENU]** button or **▲/▼** buttons until the desired function is shown on the display.
- Press the **[ENTER]** button: the values can be changed
- Use **▲/▼** buttons to select the desired mode:
 - **BLACKOUT** output turns black while no DMX is detected.
 - **FREEZE:** output based on the last valid DMX-signal is kept on the projector.
- Once the correct option shows on the display, press the **[ENTER]** button to save it.

Note: as soon as the input detects a DMX-signal, blackout or freeze mode will be cancelled.

DEFAULT SETTINGS

This is your emergency exit if you really messed up the settings: just return to factory settings. Also 2 user settings can be saved/loaded.

- Press the **[MENU]** button or **▲/▼** buttons until the desired function is shown on the display.
- Press the **ENTER** button: the values can be changed
- Use **▲/▼** buttons to selected the desired settings:
 - **[FACTORY]**
 - **[USER1]**
 - **[USER2]**
- Press the **[ENTER]** button:
 - **[FACTORY]** was selected: the display shows **[LOAD]**
 - Press the **[ENTER]** button: the display shows **[CONFIRM]**
 - Use **▲/▼** buttons to select **[YES / NO]**
 - Press the **[ENTER]** button to confirm.
 - **[USER1 / USER2]** was selected:
 - Use **▲/▼** buttons to select **[LOAD / SAVE]**
 - Press the **[ENTER]** button to confirm: the display shows **[CONFIRM]**
 - Use **▲/▼** buttons to select **[YES / NO]**
 - Press the **[ENTER]** button to confirm.
 - **[SAVE]** was selected: the current settings of the setup menu are saved to memory.
 - **[LOAD]** was selected: the previously saved settings are loaded.

Default factory settings:

PARAMETER name	Defaults factory	USER defaults 1	USER defaults 2
DMX Channel mode	01CH	Current setting in the menu	Current setting in the menu
MASTER DIM	100%	Current setting in the menu	Current setting in the menu
DIM Curve	Square	Current setting in the menu	Current setting in the menu
DIM Speed	100-0.4s	Current setting in the menu	Current setting in the menu
Auto Lock Menu	OFF	Current setting in the menu	Current setting in the menu
No DMX mode	Freeze	Current setting in the menu	Current setting in the menu

TEMPERATURE

Shows the temperature of the unit (projectors)

FIRMWARE VERSION

Used to show the current version of the firmware.

- Press the **[MENU]** button or **▲/▼** buttons until the desired function is shown on the display.
The firmware of this unit can be upgraded using a special upgrade tool with Windows® software. (separately available from Briteq).

Each time the projector is switched on, the display shows "UPDATE Wait": while this message shows on the display you can start the update using our special upgrade tool. More information about this can be found in the user manual of the upgrade tool and / or our website: www.briteq-lighting.com

ELECTRICAL INSTALLATION




Important: The electrical installation should be carried out by qualified personal only, according to the regulations for electrical and mechanical safety in your country.

Master / Slave mode:



Connect the projectors together as shown on the drawing. Please refer to the paragraph “SETUP MENU” to setup the master. All slaves must be set to SLAVE-mode..

IMPORTANT: make sure that no DMX-controller is connected, this will result in unexpected behavior!

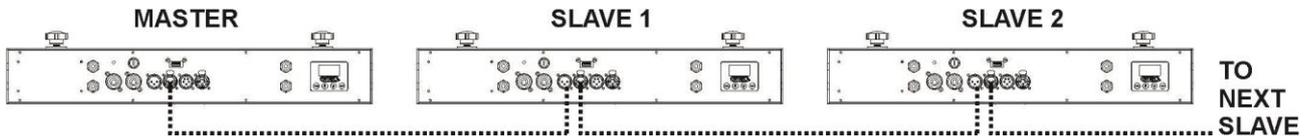

Electrical installation for two or more units in DMX-mode:

- The DMX-protocol is a widely used high speed signal to control intelligent light equipment. You need to “daisy chain” your DMX controller and all the connected units.
- Pin layout XLR-3pin: Pin1 = GND ~ Pin2 = Negative signal (-) ~ Pin3 = Positive signal (+)
- To prevent strange behavior of the light effects, due to interferences, you must use a 90Ω to 120Ω terminator at the end of the chain. Never use Y-splitter cables, this simply won't work!
- Make sure that all units are connected to the mains.
- Each unit in the chain needs to have its proper starting address so it knows which commands from the controller it has to decode. In the next section you will learn how to set the DMX addresses.

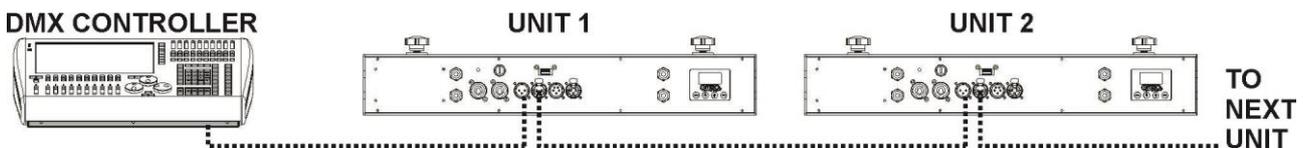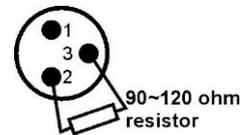

RDM FUNCTIONS / REMOTE SETUP

RDM means “Remote Device Management”. This projector works with a brief set of RDM-functions which means that it can setup a bi-directional communication with an RDM-compatible DMX-controller. Some of these functions are briefly explained below, others will be added in the future.

- The DMX-controller sends out a “discovery command”, all RDM devices respond and send their unique device ID.
- The DMX-controller asks each RDM device for some basic data so it knows which devices are connected. The projector will respond:
 - **Device name:** BEAMSPOT4-BAR NW (WW)
 - **Manufacturer:** Briteq®
 - **Category:** LED Dimmer
 - **Firmware:** x.x.x.x (firmware version of the projector)
 - **DMX address:** xxx (current DMX start address of the projector)
 - **DMX footprint:** xx (number of DMX-channels used by the projector)
 - **Personality:** xx (current personality [or DMX-working mode] used by the projectors)
- The DMX-controller can send certain commands to each RDM device which allow remote setup of the units. Thanks to this the projector can be setup remotely.

The following functions can be managed remotely:

No more need to take a ladder and set all units one by one!

- **DMX START ADDRESS:** The start address can be set remotely from 001 to xxx.
- **PERSONALITY:** The DMX working mode (DMX-chart) can be set remotely.

These 2 functions make it possible to prepare a complete DMX-patch of all projectors on the DMX-controller and send these data to all projectors at once. More functions will be added later.

OPERATING INSTRUCTIONS

Note: when the projector is switched on the display shows “UPDATE WAIT ...” This message informs you that IF you want to upgrade the firmware, you should do it while this message is shown on the display. For normal use you can ignore this message completely.

A. Standalone 1unit:

- Just connect the projector to the mains.
- Adjust the master dimmer [MASTER DIM] or select an automatic program
- Refer to chapter HOW TO SETUP to learn how to set the menu options.

B. Two or more units in master/slave setup:

- Connect the units together. Refer to the chapter “electrical installation” to learn how to do this.
- Adjust the master dimmer [MASTER DIM] or select an automatic program on the 1st unit (master unit).
- Set all the other projectors in SLAVE mode
- The slave projectors will now follow the settings of the master projector so they all work synchronously.

C. Standalone or master/slave setup controlled via the IR remote controller:

- Switch on the IR function on the (first) 4bar (master).
 - You can now use the IR remote to control the 4-bar:
1. **BLACKOUT-button:** used to switch the output ON/OFF
 2. **PROG-button:** used to select the effect programs.
 - Press the PROG button. Now you can use the + and – buttons to select another program.
 - Available programs: [FADE], [FLOW1], [METEOR]
 3. **STROB-button:** used to control the strobe function. First press the STROB-button, followed by the ±buttons to adjust the strobe speed.
Remark: works only on the effect programs.
 4. **SPEED-button:** used to adjust the speed of the effect programs. First press the SPEED-button, followed by the ±buttons to adjust the program speed.
 5. **±-Buttons:** used to increase / decrease the value of the selected function.
 6. **DIM-button:** is used to select static beams without any effect. Use the + and – buttons to adjust the GENERAL DIMMER.
 7. **Battery compartment:** receives a CR2025 3V-battery (supplied).

All the other buttons are not used.

D. Controlled by universal DMX-controller:

- Connect all units together. Refer to the chapter “Electrical installation for two or more units in DMX-mode” to learn how to do this (don’t forget to address all units properly!)
 - Connect all units to the mains and turn on the DMX controller.
- Since each unit has its own DMX-address, you can control them individually. Remember that each unit can use a different number of DMX-channels, depending on the DMX-mode you have selected in the menu. See the different DMX charts below:

DMX Chart for the 1 channel DMX-Mode

Channel:	Value:	Function:	Remarks:
1	000-255	Master dimmer (0-100%)	

DMX Chart for the 2 channel DMX-Mode

Channel:	Value:	Function:	Remarks:
1	000-255	Master dimmer (0-100%)	
2	000-004	Open	No strobe
	005-255	Increasing strobe speed	005 = slow 255 = fast

DMX Chart for the 4 channel DMX-Mode

Channel:	Value:	Function:	Remarks:
1	000-255	Master dimmer 1 (0-100%)	
2	000-255	Master dimmer 2 (0-100%)	
3	000-255	Master dimmer 3 (0-100%)	
4	000-255	Master dimmer 4 (0-100%)	

DMX Chart for the 5 channel DMX-Mode

Channel:	Value:	Function:	Remarks:
1	000-255	Master dimmer 1 (0-100%)	
2	000-255	Master dimmer 2 (0-100%)	
3	000-255	Master dimmer 3 (0-100%)	
4	000-255	Master dimmer 4 (0-100%)	
5	000-004	Open	No strobe
	005-255	Increasing strobe speed	005 = slow 255 = fast

MAINTENANCE

- Make sure the area below the installation place is free from unwanted persons during servicing.
- Switch off the unit, unplug the mains cable and wait until the unit has been cooled down.

During inspection the following points should be checked:

- All screws used for installing the device and any of its parts should be tightly fastened and may not be corroded.
- Housings, fixations and installations spots (ceiling, truss, suspensions) should be totally free from any deformation.
- When an optical lens is visibly damaged due to cracks or deep scratches, it must be replaced.
- The mains cables must be in impeccable condition and should be replaced immediately when even a small problem is detected.
- In order to protect the device from overheat the cooling fans (if any) and ventilation openings should be cleaned monthly.
- The interior of the device should be cleaned annually using a vacuum cleaner or air-jet.
- The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surroundings can cause greater accumulation of dirt on the unit's optics.
 - Clean with a soft cloth using normal glass cleaning products.
 - Always dry the parts carefully.

Attention: We strongly recommend internal cleaning to be carried out by qualified personnel!

SPECIFICATIONS

This unit is radio-interference suppressed. This product meets the requirements of the current European and national guidelines. Conformity has been established and the relevant statements and documents have been deposited by the manufacturer.

Mains Input:	AC 100 - 240V, 50/60Hz
Power consumption:	71 Watt
Power connections:	Neutrik® PowerCON® - 10A Power linking capacity.
DMX connections:	3pin-XLR + 5pin-XLR male / female
DMX channels used:	4 modes (1ch, 2ch, 4ch, 5ch)
Lamp:	4x LED, 15W Natural white 4500K (or warm white 3200K)
CRI-factor:	>90
Beam Angle:	4° (10° + 45° with frost filter)
IP-Rating:	IP20
Size:	552 x 85 x 315 (without the screws on the top)
Weight:	6.74 kg

The information might be modified without prior notice

You can download the latest version of this user manual on our website: www.briteq-lighting.com



MAILING LIST

EN: Subscribe today to our mailing list for the latest product news!

FR: Inscrivez-vous à notre liste de distribution si vous souhaitez suivre l'actualité de nos produits!

NL: Abonneer je vandaag nog op onze mailinglijst en ontvang ons laatste product nieuws!

DE: Abonnieren Sie unseren Newsletter und erhalten Sie aktuelle Produktinformationen!

ES: Suscribete hoy a nuestra lista de correo para recibir las últimas noticias!

WWW.BRITEQ-LIGHTING.COM

Copyright © 2016 by BEGLEC NV

t Hofveld 2C ~ B1702 Groot-Bijgaarden ~ Belgium

Reproduction or publication of the content in any manner, without express permission of the publisher, is prohibited.