


Multi-Monitor VESA Mount System (P-MLMT-01)

Assembly Manual

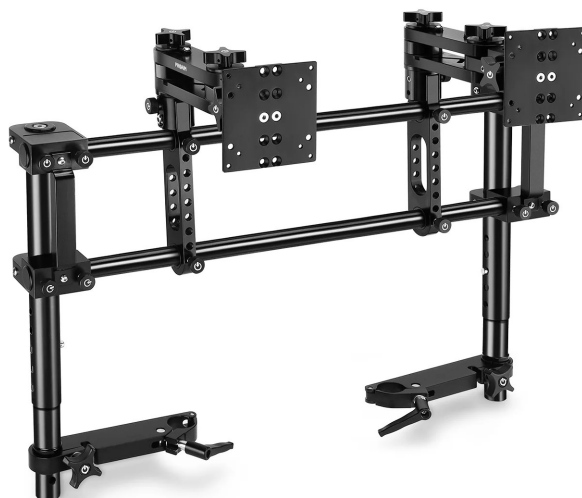

What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.



2 x Pole



2 x Vesa Mount



2 x Cross Tubes



2 x Cross Bars



2 x Clamps



2 x T-Type Allen Key
(Sizes: 3x16", 4mm)



Bag

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.


Multi-Monitor VESA Mount Setup

Assembly of clamps

- Loosen and open the ratchet knob of the clamp.



- Align and attach the clamp with the rod and then tighten it using the ratchet knob.

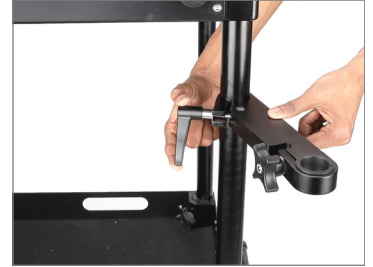

- Similarly, attach the other clamp with the rod as shown in the image.



- Now, loosen the knob of the clamp and insert the pole by matching it with the clamp hole.



- After inserting the pole, tighten it with the help of clamp knob.



- Similarly, follow the same procedure for attaching the another pole of cart.



- Five positions are provided to adjust the height in the pole, so that height can be adjusted according to your setup requirement.




NOTE: It adjusts height in five positions for seated/standing monitor viewing angles. as you can see in images.




- Then loosen all the knobs attached fixed to the pole and then remove the rod end cap.



- Similarly, remove both the rod end caps.

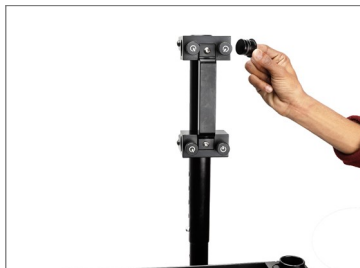

- Insert the cross tube by matching it with the hole of the pole, as shown in the image.

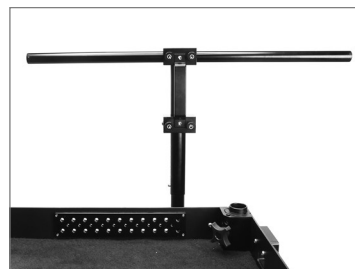


- Similarly, insert the second cross tube.



- Loosen both the knobs of the cross bar, as shown in the image.




- Now align the holes of the cross bar to cross tubes, and then insert the cross bar by simply sliding.

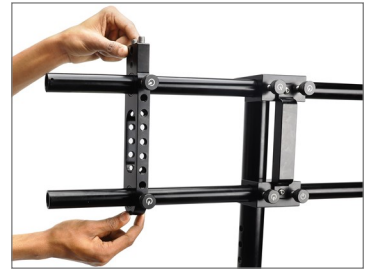


- After inserting the cross bar, securely re-tighten the knobs, and similarly insert the second cross bar.




- Properly tighten and secure the bolt on the back side of the cross bar with the help of the Allen key.

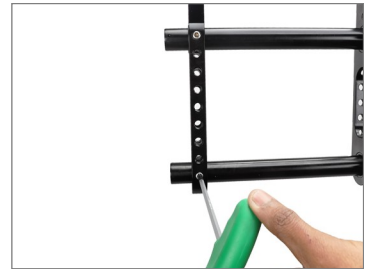


- Now equally insert both the cross tubes into the second pole equally, as shown in the image.

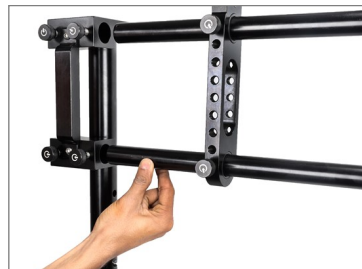

- Properly tighten the knobs of the pole to secure the assembly.

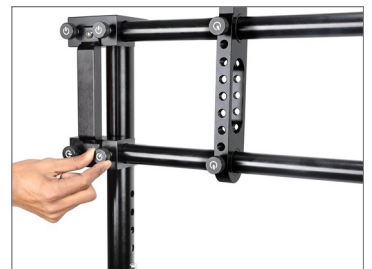

- Then insert the rod end cap to secure the cross tube, as shown in the image.

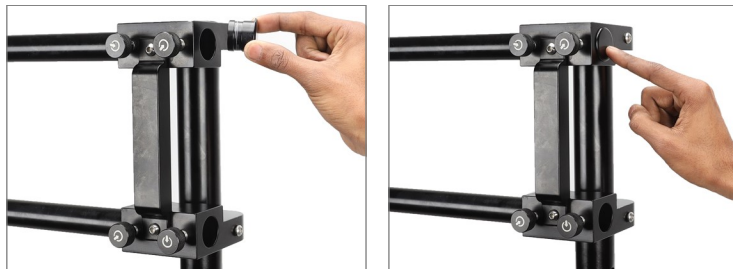

- Now, secure it with the help of the provided knob of the pole.



Assembly of Vesa Mount


- Loosen the knob of the Vesa Mount, as shown in the image.



- Loosen and remove the bolt present on the side of Vesa Mount.





- Then, mount the cross bar on the Vesa Mount.

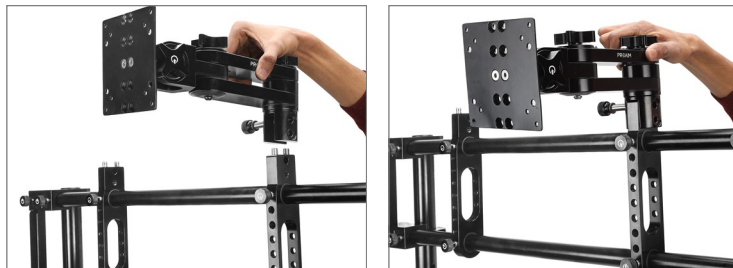

- Now, insert the bolt by matching the thread holes of Cross Bar and Vesa Mount and secure the assembly with the Allen key.



- Re-tighten the knob of the Vesa Mount and properly secure it with the cross bar.

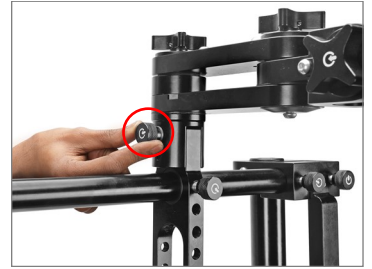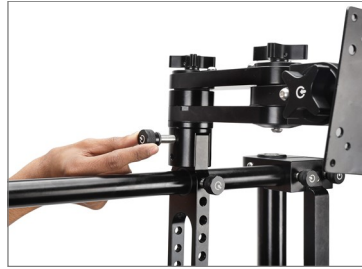

- Follow the same procedure to attach the second Vesa Mount.



- Remove the Vesa Mount by loosening the knob attached to it.



- Place and attach the Vesa Mount by matching it with the thread hole at the back of the LCD monitor (Not Included), as shown in the image



- Tighten the assembly with the help of the Allen key.



- Similarly, properly secure all the bolts by tightening them.



- Insert the LCD monitor (**Not Included**) on the Vesa Mount and properly align it. Now, insert bolts and properly tighten them with the help of Allen key.



- Finally our Multi-Monitor Vesa mount system setup is ready to use.



YOUR PROAIM MULTI-MONITOR VESA MOUNT SYSTEM ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.