
PR AIM Tablemount Geared Column (P-TMGC-01)

Assembly Manual



What's In The Box

Please inspect the contents of your shipped package to ensure you have received everything that is listed below.

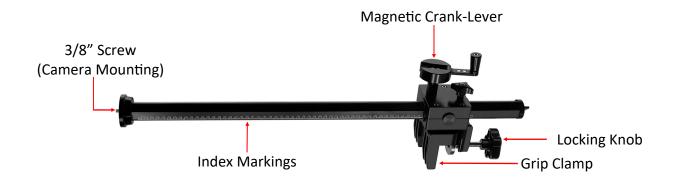

Proaim Tablemount Geared Column

All rights reserved.

No part of this document may be reproduced, stored in a retrieval system, or transmitted by any form or by any means, electronic, mechanical, photo-copying, recording, or otherwise, except as may be expressly permitted by the applicable copyright statutes or in writing by the Publisher.

Tablemount Geared Column **Setup**

• Loosen the locking knob of the Tablemount Geared Column.





 Attach the table mount Geared Column to the table through the grip clamp affixed to the geared column.

NOTE: The column comes with a jaw-like grip clamp that fits on any table, shelf or ladder with a width of 18-38mm and fastens securely.





 After attaching the Tablemount Geared column to the table, secure it properly with the help of the locking knob from the bottom side.





 Pull out the magnetic Crank-Lever and adjust the index marking accordingly with the help of the Crank-Lever, as shown in the image.





 After adjusting the index marking, stabilize it at the place where it is required with the help of a knob.

NOTE: Index marking on the column facilitates precise height adjustment between 2"-25".





NOTE: It comes with a crank lever that lets you adjust the height with exact precision.

 Mount the Superball Camera Tripod Ball Head on Tablemount Geared Column by matching the threads.





 After mounting the Superball Camera Tripod Ball Head on the column, rotate it to secure it properly and then mount the camera (Not Included) on it.

NOTE: The camera can be firmly attached to the column by means of a 3/8" screw.

 After mounting the camera (Not Included), secure it properly using the knob, as shown in the picture.









YOUR PROAIM TABLEMOUNT GEARED COLUMN ALL DRESSED UP AND READY TO GO!



(SHOWN WITH OPTIONAL ACCESSORIES)

Warranty: We offer one year warranty for our products from date of purchase. Within this period of time, we will repair it without charge for labor or parts. Warranty doesn't cover transportation costs nor does it cover a product subjected to misuse or accidental damage. Warranty repairs are subjected to inspection and evaluation by us.

Liability: We are not liable for damage caused by products that we do not supply or from mishandling in transit, accident, misuse, neglect, lack of care of the product, or service by anyone other than our company.

Contact Us: In case of any kind of dissatisfaction, please Contact us immediately and we promise our utmost support and care until you use our product.