Triple 2RU Rack Mount

HD LCD Monitor



User Manual

Product introduction:

Thank you for using our Triple Rack Mount Color LCD Monitor.

This monitor adopts advanced integrated circuits and special TFT LED panel, which makes it low power consumption, stable performance, no radiation etc. This monitor is with HDMI, 3G-SDI, CVBS and AUDIO input, HDMI, 3G-SDI, CVBS output, Stereo headphone etc. It has a wide range of application, casing compact, simple operation, and strong compatibility. The advanced features contain Screen Marker, Pixel to Pixel, Image Flip, and Color Temp.etc



To insure best use of the unit, please read the

user's manual carefully.

CAUTION

- 1. Please use the qualified power adapter to charge.
- Do not expose this product to direct sunlight, heat or humid Conditions
- 3. Keep away from strong light while using this product so as to obtain the clearest and the most colorful picture.
- 4. Please avoid heavy impact or drop on the ground.
- Do not use chemical solutions to clean this unit. Please simply wipe with a clean soft cloth to keep the brightness of the surface.
- In order to avoid damaging the product, please do not take apart or repair the unit by yourself without adjustable component in the unit by professional staff.

Features


- Triple rack mount LCD monitor, compact thin and lightweight design, which make it suitable for installing where the space is limited and also could be installed in the standard 19-inch rack.
- Three-color Tally indicator.
- With VIDEO, AUDIO, HDMI, 3G-SDI input, suitable for a variety of signals.
- Custom buttons, could set the custom F button function as customers operating habit.
- With advanced functions like Center Marker, Safe Frames,
 Check Field, Focus Assist, Aspect Ratio, Image Flip, P2P,
 Image Freeze, etc.

Contents

1. Product description	3
2. Monitor operation instruction	- 6
3. Technical Parameters	13
4. Trouble shooting	14

1. Product description


1.1 Front panel description (One of the them)

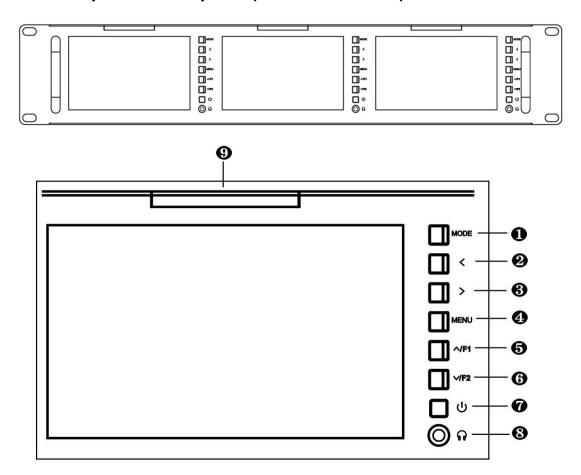


- 1. MODE: Signal input selection.
- 2. <: Volume down. In menu operation, it is for the adjustment of the set item.
- 3. >: Volume up. In menu operation, it is for the adjustment of the set item.
- 4. MENU: Menu button
- 5. △/F1: No menu display, it is F1 button, when enters into menu bar, it is for the up item selection.
- 6. √/F2: No menu display, it is F2 button, when enters into menu bar, it is for the down item selection.

- 7. U: On/Standby button
- 8. Rarphone jack
- 9. TALLY indicator.

1.2 Rear panel description

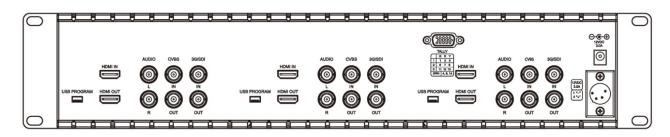


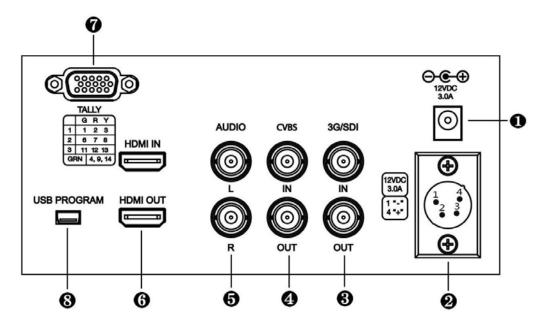

1.DC power input port.



2. 4-pin XLR DC12V power input.



Pin number	Signal
1	GND
2	No connection
3	No connection
4	+12V


3. 3G/SDI: input & output


4. CVBS: input & output

5. AUDIO: Audio input L / R

6. HDMI: input & output

7. TALLY indicator input

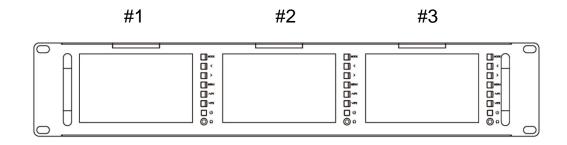



Screen #1	Screen #2	Screen #3	Tally
1	6	11	Green Light
2	7	12	Red Light
3	8	13	Yellow Light
4	9	14	Ground

8. USB program upgrade port

2. Monitor operation instruction

Connect DC12V power to our monitor, the three displays light, and then customers could operate the corresponding display screen button on the panel.

2.1 Monitor button instruction

MODE

→ Signal input selection

> Earphone volume up.

In Menu operation, it is for menu bar



In secondary menu, it is as function selection or increase the value of the analog.

< Earphone volume down.

In menu operation, it is for menu bar



In secondary menu, it is as function selection or decrease the value of the analog.

∧/F1 No menu display, it is F1 custom button.

After enter into secondary menu operation, it is for the up item selection.

√/F2 → No menu display, it is F2 custom button.

In menu operation, press<,>button to select

The press \(\seta / F2 \) button to enter into the secondary menu.

In secondary menu operation, it is for the down item selection.


F1/F2 Custom button, select F1/F2 in F menu, then


press>or<button to pop-up F button function and
select (Center Marker, Safe Frames, Check Field,
Focus Assist, Aspect Ratio, Image Flip, P2P,
Image Freeze), then use \(\triangle /F1\) or \(\forall /F2\) button to
set one of them as F1 button function, press
"MENU" button to confirm, and then press \(\forall /F2\)
button to enter F2 button custom operation.

2.2 Menu instruction

Press MENU button to pop-up menu, and press<or>button to enter menu selection, then press</ri>
/F2 button to enter secondary menu, and then use
/F1 or
/F2 button to select the menu item, after enter into secondary menu, use
or
button to adjust item parameters, press MENU button to exit.



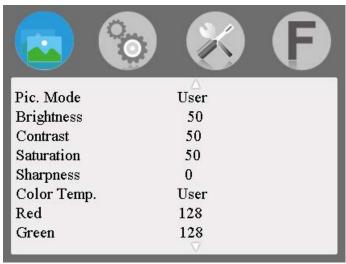

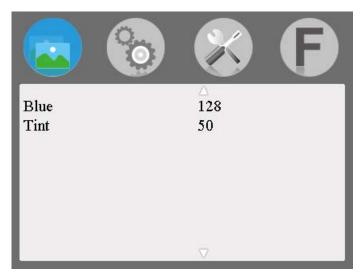

- ※ Pic. Mode: Standard, Dynamic, Mild, User.
 Select "User" to adjust Brightness, Contrast, Saturation
 Sharpness according to the site situation.
- **※ Brightness:** To adjust image's brightness.
- Contrast: To adjust the brightest and the darkest ratio
 of the image, please note the sense of picture will
 make the picture lose the color when adjust proportion
 too high or low.

- **X Saturation:** To adjust color concentration.
- ** Sharpness: Also called 'Resolution', is an indicator for the image plane definition and image edge sharpness.
 If sharpness is higher, then the details contrast on the image is higher, the image is more clearly.
- Color Temp.: 6500, 9300, User. When select "User",
 adjust the R/G/B to meet the different user's requirement
 for the different Color Temp.
- X Tint: On NTSC video mode, color tint is adjusted by Tint.

Setting

• Menu of Page One



X Language: Language for OSD:


English, 中文, Español, Português, Français, Nederlands, Deutsch, 日本語

X Aspect Ratio: To change the aspect ratio

Panorama, Just Scan, Zoom 1, Zoom 2, 16:9, 4:3, Autom

- ※ No Signal: Color options of screen background when no signal: Blue Screen, Red Screen, Green Screen, Black Screen, White Screen
- **X** OSD Trans.: To adjust the level of transparent.
- X OSD V: To adjust the OSD position in vertical.
- **Zoom All:** Select this function and use "<" or ">" button to adjust the image to Zoom In or Zoom Out separately.
- **SD Time:** Menu display time selection:
 30s,20s, 10s, Off.

Menu of Page two

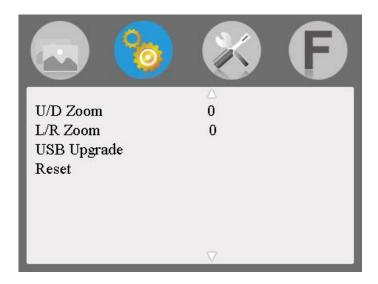


- W U/D Zoom: Press "<"or ">"button, to adjust the proportion of the image Up and Down to Zoom In or Zoom Out.
- L/R Zoom Press "<" or ">" button, to adjust the
 proportion of the image Left and Right to Zoom In or

Zoom Out.

- W USB Upgrade: When need to upgrade the native data application software, copy the file to the U disk, then through the USB cable to connect with upgrade USB port, press ">"key to confirm. After the upgrade, monitor will automatically restart. Do NOT plug a USB cable into this connector without contacting the factory.
- **※ Reset:** Press ">" button, back to original setting.



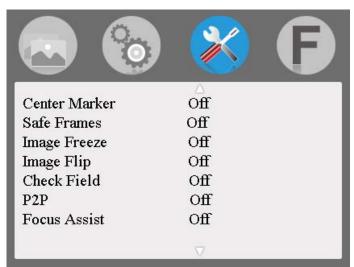

- **X** Center Marker: To set center mark (cross mark) display.
- **Safe Frames:** To adjust screen marker (off, 96%, 93%, 90%,85%, 80%, 2.35:1)
- Image Freeze: The current picture still (capture function)
- * Image Flip: The H_V Flip, H Flip, V Flip of the image around flip.

- Check field: To switch among Color, Mono, Red, Green,
 Blue.
- **P2P:** The display mode makes the resolution of the image consistent with display of the physical resolution.
- Focus Assist: Under HDMI input, select this function, Peaking (Superimpose red highlight over parts of the monochrome image in focus), could be used as focus auxiliary function in camera viewfinder.

Shortcut button setting



- **F1:** Custom button, Choose F1, press"<" or ">"button to pop-up (Center Marker, Safe Frames, Check Field, Focus Assist, Image Freeze, Aspect Ratio, Image Flip, P2P, Image Freeze) and use "\lambda/F1" or "\lambda/F2" to set one of them as definition function. Press "MENU" to confirm.
- **※ F2**: Custom button, see F1

3. Technical parameters

Panel Size	5.0inch		
Panel Type	TFT LCD		
Resolution	800×480×3(RGB)		
Backlight	LED		
Dot Pitch	0.045(W) x 0.135 (H) mm		
Aspect Ratio	16:9		
Brightness	500cd/ m²		
Contrast	500:1		
Response Time	Ton=10ms; Toff=15ms		
Viewing Angle	70°/70°(L/R) 50°/70°(U/D)		
Input Signal	HDMI/ 3G-SDI/ Video/ Audio(L/R)		
Output signal	HDMI/ 3G-SDI/ Video		
Color Video Format	PAL-4.43 / NTSC-3.58		
HDMI Support Format	480i /480p /576i /576p 720p (60/59.94/50/30/29/25/24/23.98) 1080i (60/59.94/50) 1080p(60/59.94/50/30/29.97/25/24/24fps/23.98/23.98fps)		
SDI Support Format	480i/576i 720p(60/59.94/50/30/29/25/24/23.98) 1080i(60/59.94/50) 1080p(60/59.94/50/30/29.97/25/24/24fps/23.98/23.98fps)		
Headphone Output	Stereo headphone output 3.5 mm interface		
Input Voltage	DC: 9.0~24.0V		
Power Consumption	≦25W		
Unit Size (mm)	482.6Lx88Hx34D mm		
Unit Weight	≈1570g		
Working Temperature	−20∼55 ℃		
Storage Temperature	-30~65℃		

4. Trouble Shooting

4.1 Only Mono or Single color picture:

- ① Please check **Saturation**, **Brightness** & **Contrast** adjustment.
- ② Please check monitor color from the menu "Check Field" is in Mono image or in other single color state.

4.2 NO image after put on the power

- ① Check if signal cable connection is in good condition, also need to check if the monitor is synchronized with the input signal, press "MODE" button to have a try.
- ② Make sure to use the standard adapter to connect the monitor.

4.3 No Sound

- ① Volume control did not open, can press the volume button and try increasing the volume.
- 2 Check the AUDIO input and ensure there is AUDIO signal.

■ Remark:

- ★ If there are still other problems, please contact with our related technical persons.
- ★If there are changes without prior notice.